


WASHING YOUR LAUNDRY

STEP-BY-STEP INSTRUCTIONS


1 LOAD MACHINE



Load clothes loosely and securely close the door

* Only load machine to half full for front load or to the top of the agitator for top load

2 ADD DETERGENT



ONLY USE HIGH-EFFICIENCY DETERGENT

Open dispenser and add no more than 1/4 cup of **he** liquid detergent
OR
Add one pod to the wash tub

3 SELECT SETTINGS



Select your desired cycle

* For additional details on the cycle settings scan the QR Code below



DOING THE FOLLOWING WILL DESTROY CLOTHES OR EQUIPMENT


- ~~X~~ OVERLOADING MACHINES
- ~~X~~ WASHING RUGS OR BATH MATS
- ~~X~~ SITTING ON MACHINES
- ~~X~~ USING POWDER DETERGENT
- ~~X~~ WASHING COMFORTERS

4 MAKE PAYMENT



 
If required

5 START MACHINE



Push the START button to begin washing

BEST PRACTICES

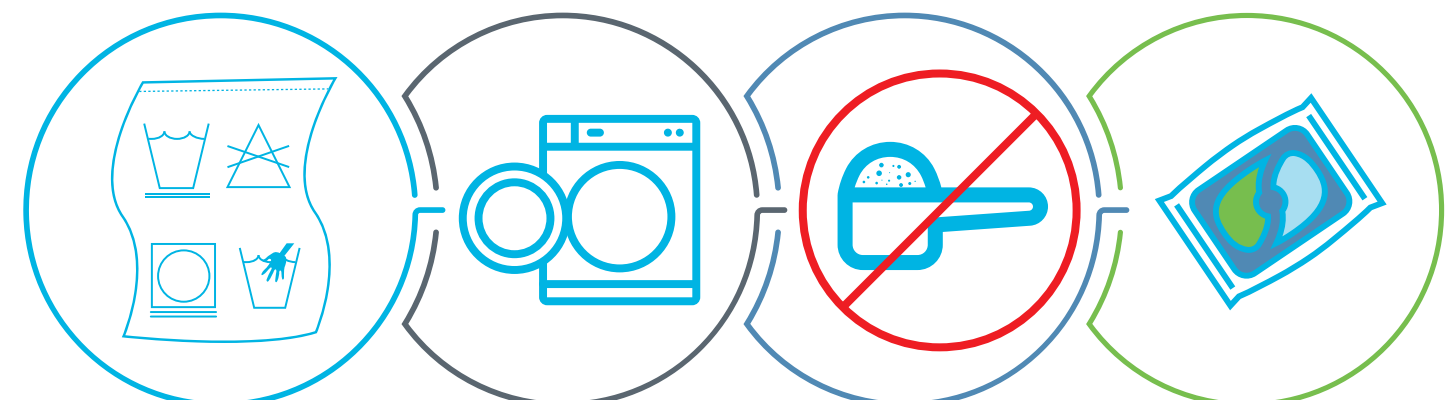


Double-check clothing label for recommended temperature settings.

Leave the washer door open after each use to help the drum dry quickly.

Using powder detergent can lead to damaged clothes and equipment.

 
If using a pod, use one per load. Never place the pod in the soap tray.

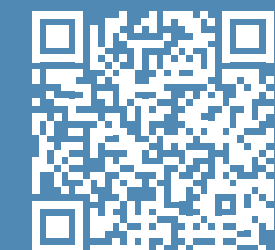

LAVANDO SU ROPA

INSTRUCCIONES PASO A PASO



1 CARGA LA MAQUINA



Cargue su ropa sin apretar y cierre la puerta

* Carga la maquina solo hasta la mitad de la lavadora (front load) o hasta la parte superior del agitador

2 AÑADE DETERGENTE



SOLAMENTE USE DETERGENTE ALTO-EFICIE

Abrir el dispensador anadir no mas de 1/4 taza detergente liquido O Añade una cápsula a la tina de lavado

3 SELECCIONE AJUSTES



Seleccione su ciclo descado

* Para in formacion adicional del ciclo y sus ajustes escane el codigo QR



HACER LO SIGUIENTE DESTRUIRÁ LA ROPA O EL EQUIPO

- SUBRE CARGANDO LAS MAQUINAS
- LAVANDO ALFOMBRAS Y ALFOMBRAS DE BAÑO
- SENTANDO EN LAS MÁQUINAS
- USANDO DETERGENTE ENPOLVO
- LAVANDO CORCHAS

4 REALIZAR EL PAGO



Si es necesario

5 INCIAR LA MAQUINA

 


Empuje el botón de comiezo para empezar el lavado


MEJORES PRÁCTICAS




Compruebe en la etiqueta de la ropa los ajustes de temperatura recomendados.

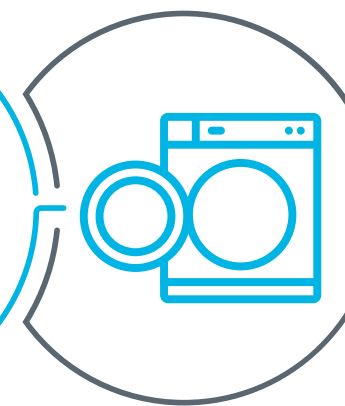

 Deje la puerta lavadora abierta después de cada uso para que el tambor se seque rapidamente.

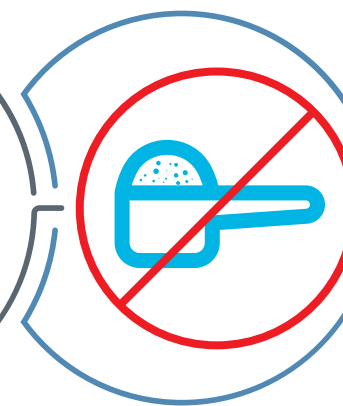

 Usando detergente en polvo puede danar la ropa y equipo.

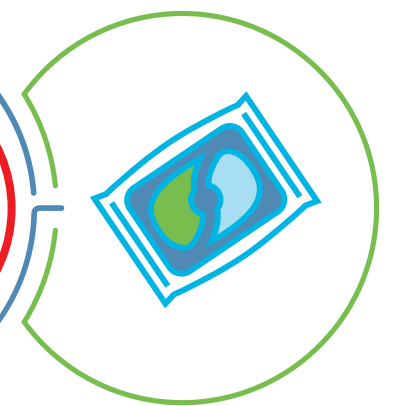

Si utiliza una capsula utilice una (1) por lavado y no coloque en la bandeja de jabon.

